


ECOSURE PILLAR

Thank you for purchasing the Ecosure Pillar water tank.

INSTALLATION INSTRUCTIONS

- The tank must be sited on a flat, level concrete base.
- Please leave at least a 20mm gap between the back of the tank and the wall. This will allow for the natural expansion of the tank when full of water.
- Fix the brackets to the top of the tank and screw into the wall in order to provide greater stability.
- When fixing a tap to the threaded outlet, use PTFE tape and do not over tighten.
- Down-pipe diverters can be installed approximately 50mm below the top of the tank. Please remember to keep the pipe running from the tank to the diverter level, to act as an overflow for the tank.

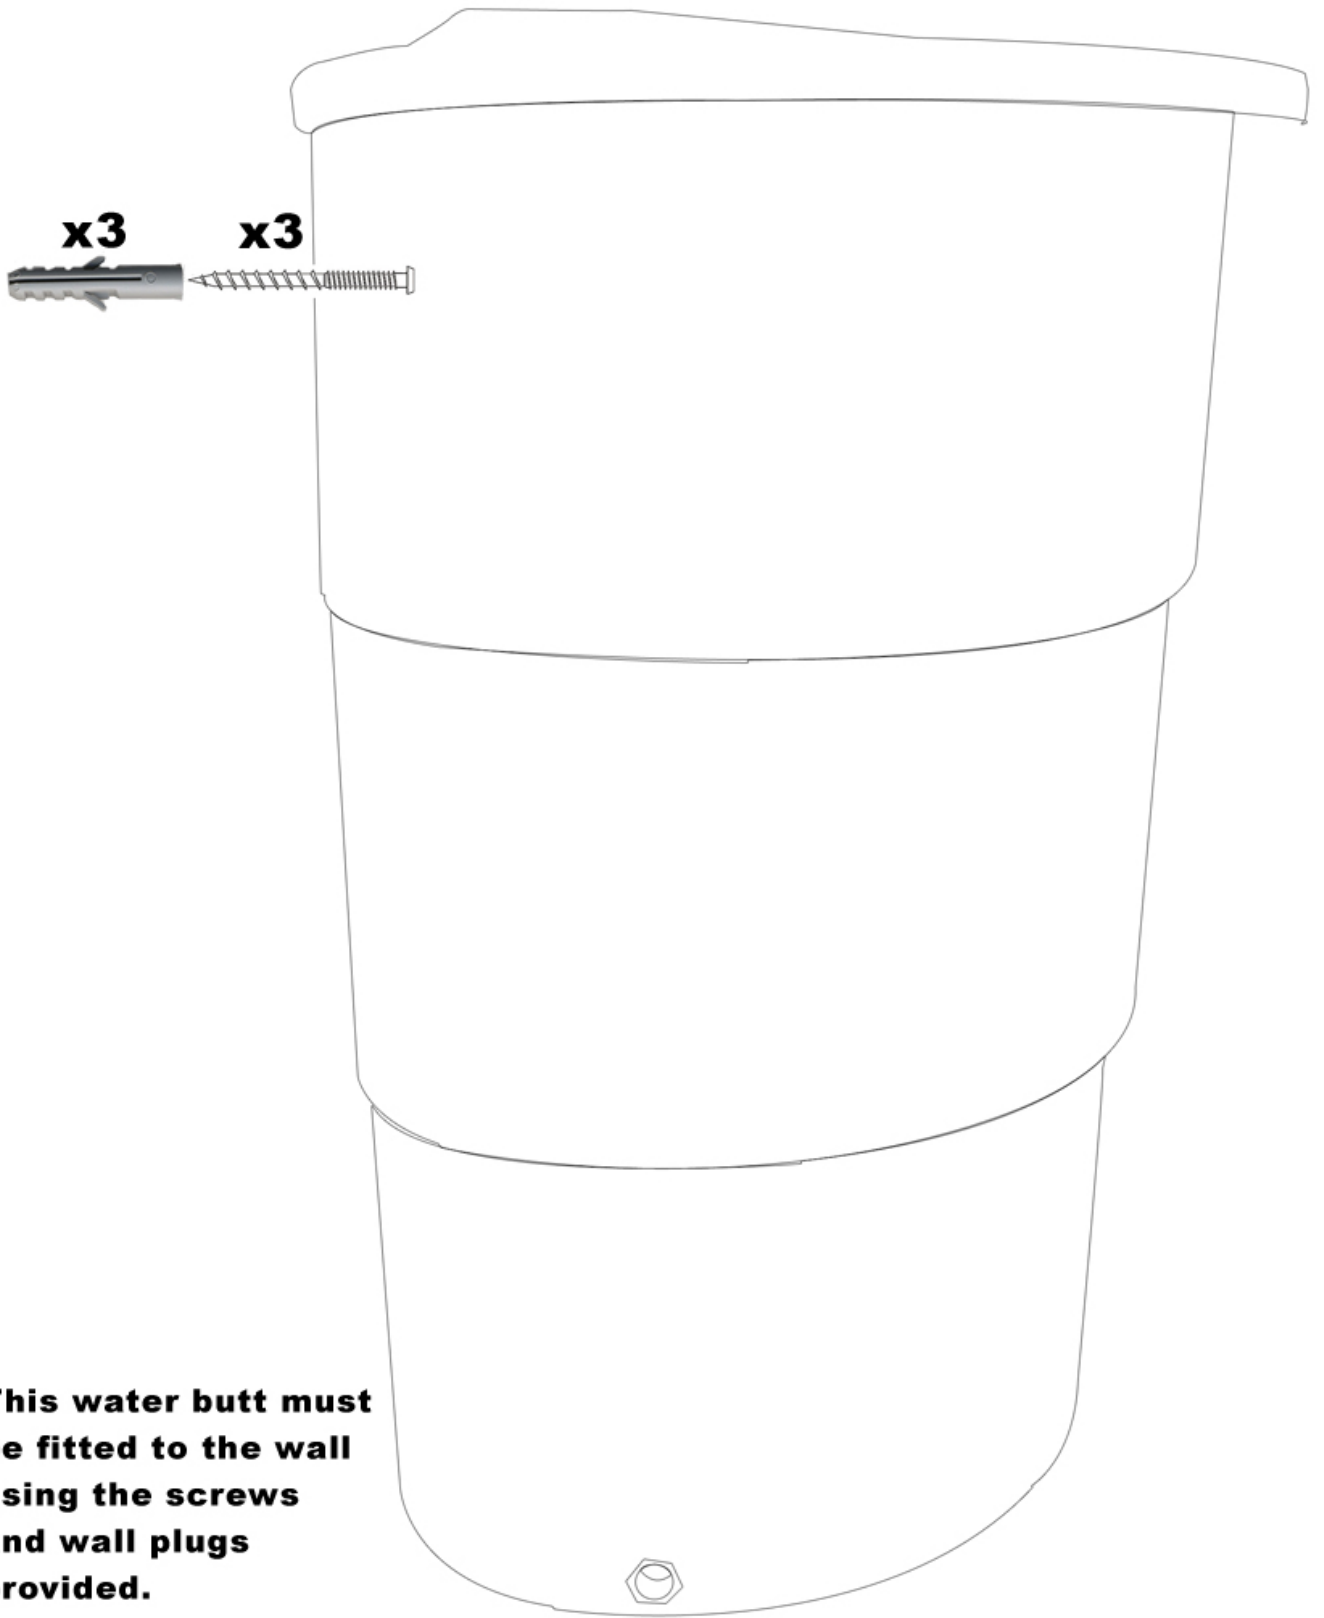

This water butt must be fitted to the wall using the screws and wall plugs provided.